


APPLICATION SHEET AN4340-1

Using the CR4340 Series Current Transmitter

The 4340 series are current source devices that automatically adjust their DC current output to maintain a level that is proportional to the Average RMS Value of the AC current flowing through the window of the transmitter. Since these are current sourcing devices, the 4-20mA loop must derive power from an external 110 VAC power supply.

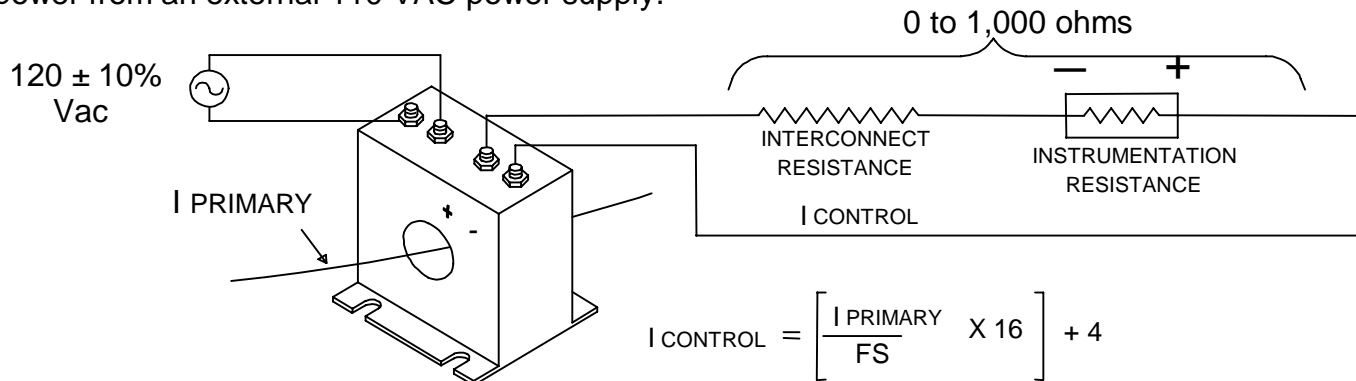

TROUBLESHOOTING AND INSTALLATION NOTES

- Verify that the correct polarity is observed as shown. The 4340 series are polarity protected, so damage should not occur if connected in reverse polarity.
- Insure that the total loop resistance (instrument plus wire) does not exceed 1000 Ohms. Most commonly, an instrument with a burden of 250 Ohms is chosen. If the total loop resistance is greater than 1000 Ohms the transducer will not function according to published specifications.
- Choosing connection wire with 22 gauge conductors or larger will minimize connection resistance on most applications. Twisted pair wire should be adequate for most applications but shielded/twisted pair wire with the shield grounded at the instrumentation end may be required for the most severe environments. Refer to the instrumentation installation manual for more details regarding interconnect requirements.
- Verify that the output of the AC supply is at least 110VAC, with a current rating of 20 ma or greater per transmitter connected.
- The output is calibrated to be proportional to the Average RMS of the current primary at 60 Hz. Signals from devices such as SCR and variable speed drives will not produce an accurate indication of RMS current levels.
- Multiple transducers may be attached to the same power supply. Attach the power supply in parallel to all transducers.
- The first step in troubleshooting would be to check the voltage across all of the components in the loop. At no load the voltage across the instrumentation will be its burden resistance times .004.
- Transducers may be mounted in close proximity to each other without concern for magnetic interaction.
- An external current transformer may be attached to the transducer for applications that require monitoring current levels above 600 AAC.